
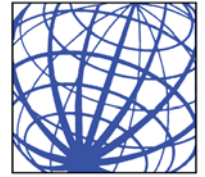


# INSTALLATION EXAMPLE USING COLUMN BRACKET

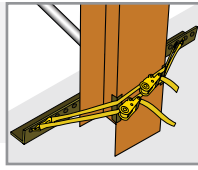

**INCORDE**

The column bracket is typically secured at the base of a steel column, but may be positioned higher on the column to achieve the desired support arm angle.

Always secure the column bracket in place with two anchor straps with edge protecting corners and a safety hanger cable between the column bracket and the internal cable assembly on the floor above.

