

## PARTS LIST COMPONENT IDENTIFICATION



**Unpack all support components, cabling, fittings and netting.** Check all pieces against the packing slip for description, quantity, and lengths. Check the safety netting for any cuts or tears in the net or rope cording. Contact INCORD if anything is missing, not to length, or if any portion of the netting is damaged. Do not substitute any installation hardware or net material.

Match all components to their placement on the design blue print. In some instances, custom lengths of poles and cabling must be matched to a specific work area. Mounting brackets for cast-in-place concrete and steel pillar mounting brackets must also be matched to their designated work area.

Your components may differ in appearance from those pictured on this page. This is for reference and basic identification only.



**Read all Instructions carefully** before installing the Personnel Safety Net System. Keep in mind that safe practices must always be used during installation, testing, inspection, maintenance, and removal.

### Components:

1. Personnel Safety Net, with Snap-Hooks
2. Top Support Arm Section
3. Support Arm Coupler
4. Lower Support Arm Section
5. Terminator Bar, with hardware
6. Mounting Bracket, for concrete slab
7. Concrete Slab-Grabber
8. Column Mounting Bracket with anchor straps
9. Hitch Pin, two per arm, one per mount
10. Wire Rope Cable with one end terminated
  - a. Internal Cable (continuous)
  - b. External Cable (35 ft)
  - c. Cross Cables for terminator bar (35 ft)
  - d. Hanger Cable (18 ft) for column mount and slab-grabber
  - e. Tag Line (20 ft) for support arm
11. Turnbuckle, one or more for internal cabling
12. Cable Wire Clamp, three per cable end
13. Thimble, one per cable end
14. Shackle, one per cable end

