




PERSONNEL SAFETY NET ASSEMBLY AND INSTALLATION

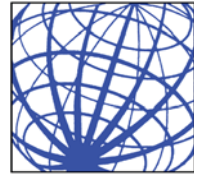


INCORP

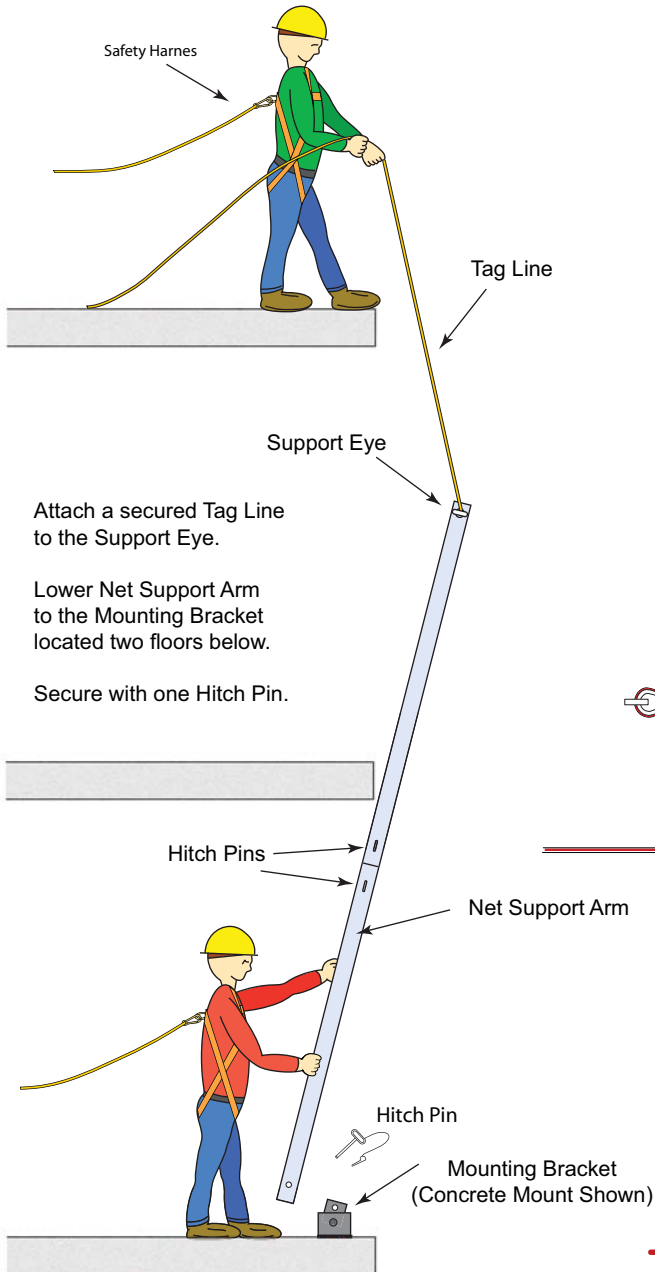

Note: A properly prepared cable end with thimble uses three cable clamps evenly spaced with the first clamp securing the thimble. Install clamps as shown in the illustration.

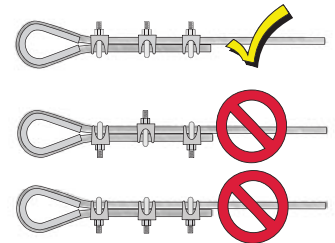

Cable Clamp Assembly and Torque Specifications			
Clamp Size (in)	Clamps	Cable Turn-Back (in)	Torque (ft-lb)
1/4	3	4-3/4	30
3/8	3	6-1/2	45


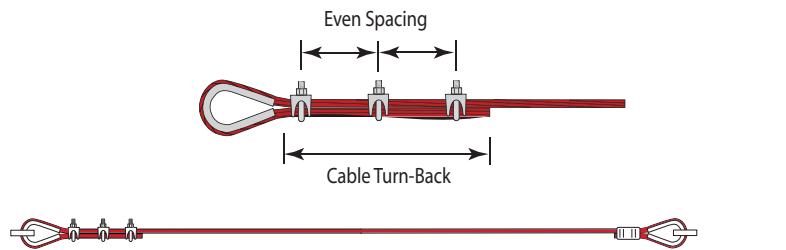


Exterior Cable Assembly



Internal Cable Assembly

Expand Turnbuckle to 1/2" limits before installing

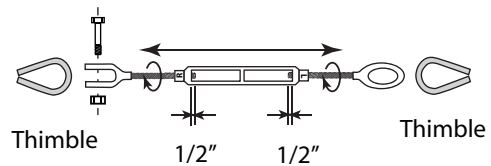

Finished Assembly

Cable Clamps